 


# CONNECTING SONY SMART TV TO LAPTOPS (PC / MAC)


Turn on Laptop

Attach HDMI cord from Smart TV to HDMI port on side/back of laptop

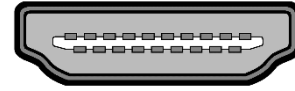

Using clicker (see right -->), turn on Smart TV using the green power button in upper right corner of clicker.

Change Smart TV input using black clicker button with white lettering **INPUT** (See blue arrow left side middle of clicker)

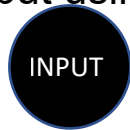

On Smart TV screen look to confirm the input appears as HDMI3. If not, use clicker arrow ring in center middle of clicker to move to HDMI3. (If an HDMI3 setting doesn't work try other HDMI input options).

To select HDMI input setting press (quickly) on the button with + in center of arrow ring.

If you end up with on Smart TV screen a choice above the HDMI setting you want, which says Hide Show

On the clicker press the round black button with blue **Back**

The connect is successful when the Smart TV screen changes to look like laptop screen.



# TROUBLESHOOTING

If Smart TV will not turn on, hold clicker level / parallel with floor. Point the clicker at the bottom of the Smart TV screen where the word SONY appears just above a small blue light, then press green power button.

If you cannot get out of an unwanted menu choice press the back button on the clicker. When in doubt, turn off the Smart TV, wait 10 seconds for electricity to clear, and start over with instructions.

If laptop screen is black after making the connection a setting must be changed. Typically there is a button on the laptop keyboard, often along the very top row of keys (Function "F" keys). Look for the function key with a small diagram of computer screen, press this button slowly up to three times to see if image on Smart TV reappears on laptop.

If Smart TV will not turn on check that the device is plugged in completely in wall outlet.

If Smart TV stand needs to be repositioned make sure front wheel locks (black flap) is in the "up" position (parallel to floor) and not pressed down in front of wheel. After rolling stand to desired position relock the wheels.

Not sure what cord to connect to laptop, look for the black cord attached to back of Smart TV running down toward floor. It has an unattached end that is black with gold end.

